

verfügbare auswechselbare Ladeschalen

Identnummer	Beschreibung	Identnummer	Beschreibung	Identnummer	Beschreibung
LS2830	Acer 02491-0028-00	LS2172 LS2104	General Electric GB-20 GB-40	LS2830	Megapix 02491-0028-00
LS2263	Audiovox SMT5600	LS2550	Grundig BPL8-10	LS2202 LS2400 LS2004	Minolta NP-200 NP-400 NP-500
LS2249	BenQ 02491-0015-00, DC-E43, -E53	LS2647	HP Hewlett Packard iPAQ h4100, h4150, h4155, rx1950, PE2028 Serie	LS2830	Minox 02491-0028-00
LS2729	RIM Blackberry 6210, 6220, 6230, 6238, 6280, 6510, 6710, 6720, 6750,7210, 7220, 7230, 7250, 7270, 7280, 7290, 7510, 7520, 7730, 7750, 7780	LS2060 LS1821	A1812A, L1812A, L1812B PhotoSmart C912	LS2112 LS2125 LS2135 LS2155 LS2177 LS2189 LS2196 LS2140 LS2317 LS2612	Nikon EN-EL1 EN-EL2 EN-EL3, EN-EL3a, EN-EL3e EN-EL5, CP1 EN-EL7 EN-EL8 EN-EL9 EN-EL10 EN-EL11 EN-EL12
LS2710	7100, 7105, 7130, 8300, 8700, 8703, 8705, 8707	LS2830 LS2120 LS2407	Hitachi 02491-0028-00 DZ-BP14, -BP14R, -BP16, -BP28 DZ-BP07P, -BP07PW, -BP07S, - BP14S, -BP14SJ, -BP14SW	LS2263	o2 xda phone II, IIm, ST26
LS2234 LS2508	Canon BP-2L5, BP-2L12, BP-2L13, BP-2L14 BP-208, BP-208DG, BP-308, BP-310, BP-315	LS2550 LS2550	VM-BPL13, VM-BPL27, VM-BPL30, VM-BPL60 VM-N520, VM-NP500, VM-NP520	LS2110 LS2060 LS2130 LS2140 LS2152 LS2101 LS2102 LS2106	Olympus LI-10B, LI-12B LI-20B LI-30B LI-40B, LI-42B LI-50B BLM-1 BLL-1 BLS-1
LS2406 LS2511	BP-406, BP-407, BP-412, BP-422 BP-508, BP-511, BP-511A, BP-512, BP-512A, BP-514, BP-522, BP-535	LS2263	iMate SP3, SP3i	LS2263	Orange SPV C500, SPV C550
LS2608 LS2309 LS2914	BP-608, BP-608A, BP-617 BP-808, BP-809, BP-819 BP-911, BP-914, BP-915, BP-924, BP-927, BP-930, BP-930R, BP-941, BP-945, BP-950G, BP-970G	LS2009	Iriver BP009, H10 5GB, H10 6GB	LS2650	PalmOne Treo 650, 700, 800, Treo Ace
LS2001 LS2234 LS2334 LS2046 LS2056 LS2334 LS2046 LS2056 LS2362 LS2371 LS2315 LS2826	NB-1L, NB-1LH NB-2L, NB-2LH NB-3L NB-4L NB-5L NB-3L NB-4L NB-5L NB-6L NB-7L LP-E5 LP-E6	LS2037 LS2080 LS2107 LS2207 LS2306 LS2408 LS2507 LS2550 LS2712 LS2550 LS2907 LS2707 LS2808 LS2208	JVC BN-V37U BN-V101U BN-V107, BN-V114 BN-V207, BN-V214 BN-V306, BN-V312 BN-V408, BN-V416, BN-V428 BN-V507, BN-514 BN-V607, BN-V615, BN-V617 BN-V712, BN-V714 BN-V812, BN-V814 BN-V907U BN-VF707, BN-VF714, BN-VF733 BN-VF808, BN-VF815, BN-VF823 BN-VM200	LS2120 LS2407	Panasonic CGA-D54 CGA-DU06, -DU07E, -DU12, -DU14, - DU21E
LS2020 LS2240 LS2375 LS2079 LS2157 LS2119	Casio NP-20 NP-40 NP-50 NP-60 NP-70 NP-100	LS2080 LS2060 LS2061 LS2755 LS2771 LS2772 LS2773 LS2041 LS2850	KLIC-3000 KLIC-5000 KLIC-5001 KLIC-7000 KLIC-7001 KLIC-7002 KLIC-7003 KLIC-7005 KLIC-8000	LS2017 LS2077 LS2021 LS2187 LS2128 LS2171 LS2168 LS2007 LS2060 LS2060 LS2303 LS2550 LS2120	CGA-S001 CGA-S002 CGA-S003 CGA-S004 CGA-S005 CGA-S007 CGA-S008 CGA-S101-101A CGA-S301 CGA-S302 CGA-S303 CGR-B202, -B403, -B814 CGR-D07, CGR-D08, CGR-D14, CGR-D16, CGR-D28
LS2760 LS2411	Contax BP-760S BP-1100S	LS2051 LS2004 LS2041 LS2400 LS2004 LS2700 LS2112 LS2249	DR-LB1 DR-LB4 NP-1 NP-400 NP-600 NP-700 NP-800 02491-0015-00, NP-900	LS2120 LS2077 LS2120 LS2610	CGR-D110, CGR-D120, CGR-D210, CGR-D220, CGR-D320 CGR-S006 CGR-S602 CGR-V14, CGR-V26, CGR-V114, CGR-V610, CGR-V620
LS2060	Creative NP-60	LS2022 LS2051 LS2080 LS2061	Kyocera/Yashica BP-780S BP-800S, BP-900S, BP-1000S BP-1100 BP-1500S	LS2007 LS2017 LS2187 LS2128 LS2171 LS2168 LS2158 LS2154 LS2120 LS2077 LS2077 LS2550 LS2550 LS2021 LS2060 LS2550 LS2120	DMW-BC7 DMW-BCA7 DMW-BCB7 DMW-BCC12 DMW-BCD10 DMW-BCE10 DMW-BCF10 DMW-BCG10 DMW-BL14 DMW-BM7 DMW-BMA7 PV-DBP5 VW-B202 VW-VBA05 VW-VBA10, -VBA20, -VBA21 VW-VBD1, -VBD2 VW-VBD21, -VBD22, -VBD25, -VBD33, -VBD35, -VBD40, -VBD55 VW-VBD070, -VBD120, -VBD140, -VBD210, -VBD310 VW-VBE10
LS2647	Dell Axim X50, X50v, X51, X51v , HP iPAQ h4100...	LS2120 LS2017 LS2120 LS2128 LS2077 LS2080 LS2080	Leica BP-DC-1 BP-DC-2 BP-DC-3 BP-DC-4 BP-DC-5 NP-80 NP-100	LS2077 LS2120 LS2610	
LS2263	Dopod 565, 575, 585	LS2022 LS2051 LS2080 LS2061	Maginon 02491-0028-00	LS2077 LS2120 LS2610	
LS2940 LS2970	Epson EPALB2, EU-94 PALB2, EU-97 für Mediaplayer P-2000, P-4000	LS2120 LS2017 LS2120 LS2128 LS2077 LS2080 LS2080	Medion MD9014, MD9021, MD9021n, MD9035, MD9035n, MD9069, MD9069n, MD9090 MD80566 02491-0015-00, MD85700	LS2407 LS2303	
LS2030 LS2368 LS2060 LS2128 LS2080 LS2095 LS2080 LS2061 LS2142 LS2135	FujiFilm NP-30 NP-50 NP-60 NP-70 NP-80, NP-100 NP-95 NP-100 NP-120 NP-140 NP-150	LS2016 LS2016 LS2249			
LS2647	Fujitsu-Siemens Pocket LOOX N500, N520, N560, C550				

Identnummer	Beschreibung	Identnummer	Beschreibung
	Pentax		Sony
LS2060	D-LI 2	LS2181	NP-BG1
LS2061	D-LI 7	LS2181	NP-FG1
LS2041	D-LI 8	LS2550	NP-500, -510, -520
LS2400	D-LI 50	LS2111	NP-F10, -F20, -F30
LS2140	D-LI 63	LS2200	NP-F100, -F200, -F220, -F300
LS2368	D-LI 68	LS2550	NP-F330, -F500, -F520, -F550, -F560, -F570, -F730, -F750, -F760, -F770, ..
LS2317	D-LI 78		..., -F900, -F930, -F950, -F960, -F970
LS2178	D-LI 88	LS2555	NP-FA50, -FA70
LS1821	EI-D-LI 1	LS2010	NP-FC10, -FC11
	Premier	LS2577	NP-FE1
LS2249	02491-0015-00	LS2050	NP-FF50, -FF51, -FF51S, -FF70, -FF71, -FF71S
LS2830	02491-0028-00		
	Qtek	LS2055	NP-FH30, -FH40, -FH50, -FH60, -FH70, -FH90, -FH100
LS2263	8010, 8020, 8100	LS2550	NP-FM30, -FM50, -FM51, -FM55H, -FM70, -FM71, -FM90, -FM91
	RCA	LS2055	NP-FP30, -FP50, -FP60, -FP70, -FP71, -FP90
LS2550	BB-65L	LS2113	NP-FR1
	Revue	LS2111	NP-FS10, -FS11, -FS12, -FS20, -FS21, -FS22, -FS30, -FS31, -FS33
LS2830	02491-0028-00	LS2113	NP-FT1
	Ricoh	LS2550	NP-QM50, -QM51, -QM70, -QM71, -QM71D, -QM90, -QM91, -QM91D
LS2080	DB-20, DB-20L, DB-30	LS2210	PSP-110
LS2060	DB-40		
LS2061	DB-43	LS2560	Symbol Scanner P360, P370, P460, P470
LS2850	DB-50		
LS2128	DB-60		
LS2168	DB-70		
LS2317	DB-80		
	Rollei	LS2080	Toshiba PDR-BT1, PDR-BT2
LS2249	02491-0015-00, Prego dp4200, dp5200, dp6200	LS2060	PDR-BT3
LS2830	02491-0028-00, Prego dp8300, dp8330	LS2051	PDR-BT9
	Samsung		Traveler
LS2855	IA-BP85ST	LS2830	02491-0028-00
LS2016	SB-L70, -L70A, -L70R, -L110, -L110A, -L160, -L220, -L320, -L480	LS2249	02491-0015-00, Slimline X5
LS2870	SB-L70G, -L110G		
LS2882	SB-LH82	LS2263	T-Mobile SDA, SDA music, SDA II, ST26
LS2016	SB-LS70, -LS70AB, -LS110, -LS220		
LS2800	SB-LSM80, -LSM160, -LSM330	LS2249	Voigtländer 02491-0015-00, Virtus D4
LS2900	SB-P90A, -P180A		
LS2821	SB-P120A, -P240A		
LS2700	SLB-0637	LS2060	Yaesu FNB-82LI
LS2357	SLB-07A		
LS2041	SLB-0737, -0837		
LS2413	SLB-0837(B)	LS2051	Yashica BP-800S, BP-900S, BP-1000S
LS2937	SLB-0937		
LS2060	SLB-1037, -1137		
LS2793	SLB-1137C		
LS2391	SLB-1137D		
LS2940	SLB-1237		
LS2815	SLB-1974		
	Sanyo		
LS2110	DB-L10		
LS2132	DB-L20		
LS2700	DB-L30		
LS2410	DB-L40		
LS2122	UR-121D/124		
	Sharp		
LS2051	AD-S30BT, -S31BT, -T50BT, -T51BT		
LS2002	BT-L1, -L2, -L2U, -L11, -L12U, -L22U		
LS2031	BT-L31		
LS2043	BT-L43		
LS2044	BT-L44		
LS2221	BT-L74, -L221, -L222S, -L241, -L244, -L441, -L442S, -LS222, -LS244, -LS442		
LS2225	BT-L225, -L445, -L665		
LS2226	BT-L226U		
LS2226	VR-BL1		
LS2221	VR-BL90		
LS2043	VR-BL91		
LS2221	VR-BL93		
LS2221	VR-BLF20, VR-BLF21, VR-BLF40, VR-BLF41		
LS2225	VR-BLN8, VR-BLN10, VR-BLN20		
LS2226	VR-BLZ9		